


Instructions to Powerwash Chromebook

Make sure the unit is turned off


Hold down the button ESC + Refresh and Power the following image is for HP. Power button is on the side for Dell chromebooks.



After the process you will see the following screen: Click Enter

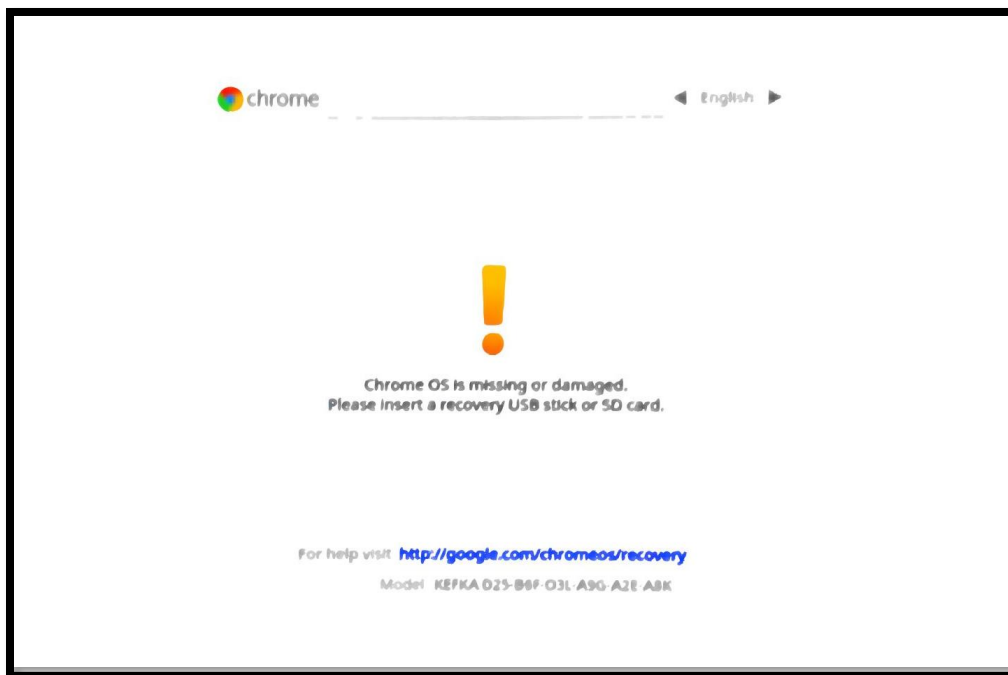


Hold down the keys Ctrl + Alt + D at the same time and release the buttons

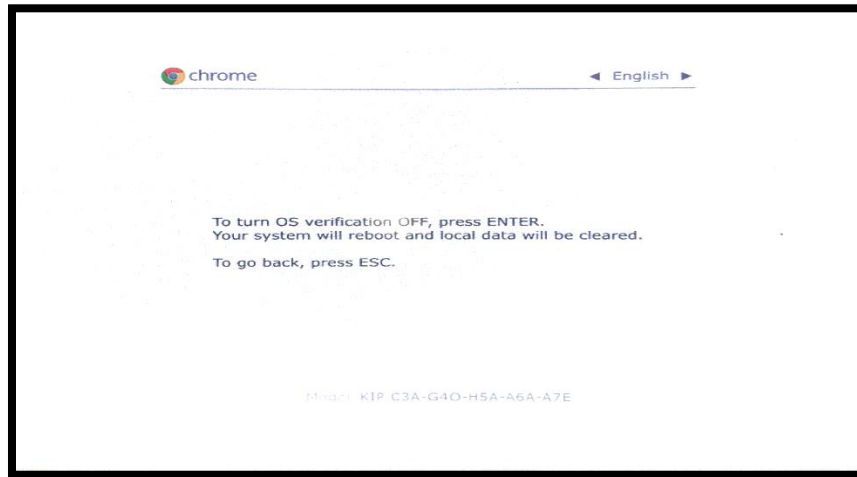


The following screen will appear: Click the spacebar key

The Unit will reboot

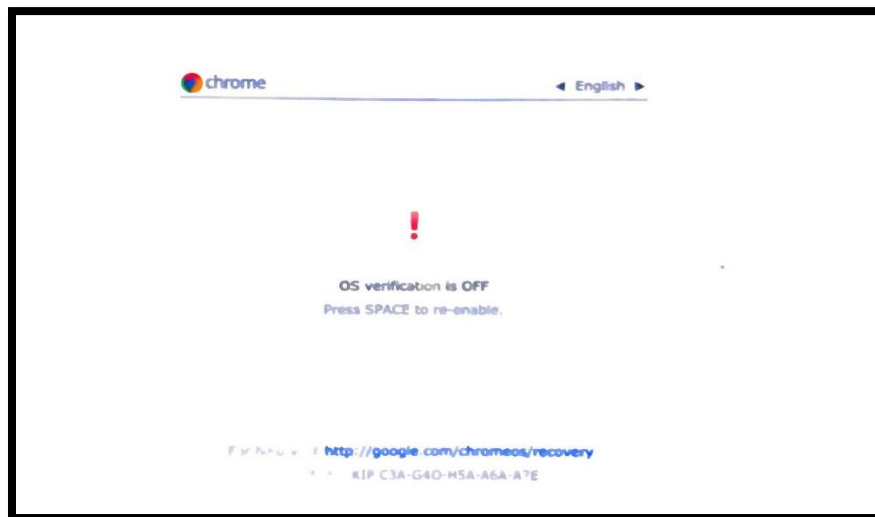


After you have completed the powerwash you will see the following:


Click Let's go

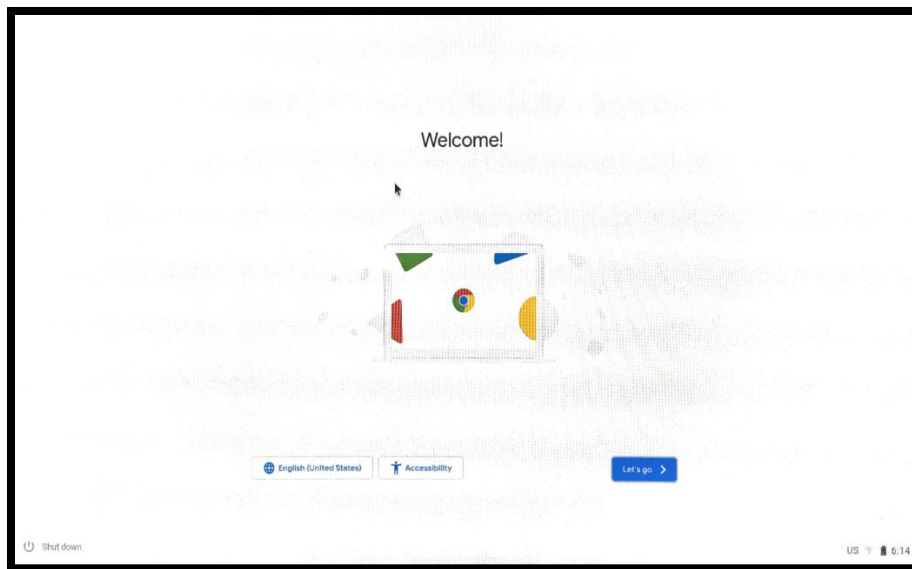

Choose your WIFI

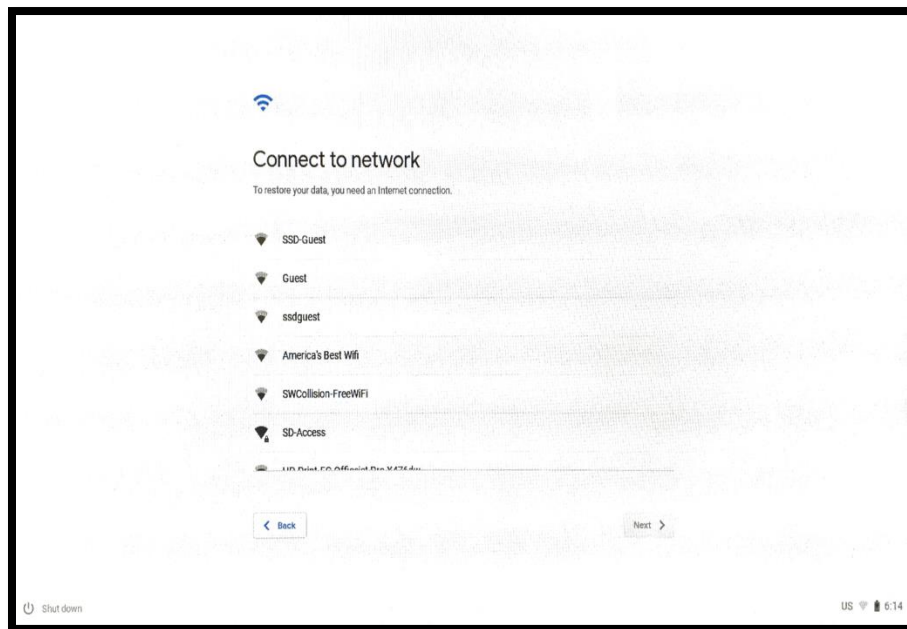


Enter your WIFI password

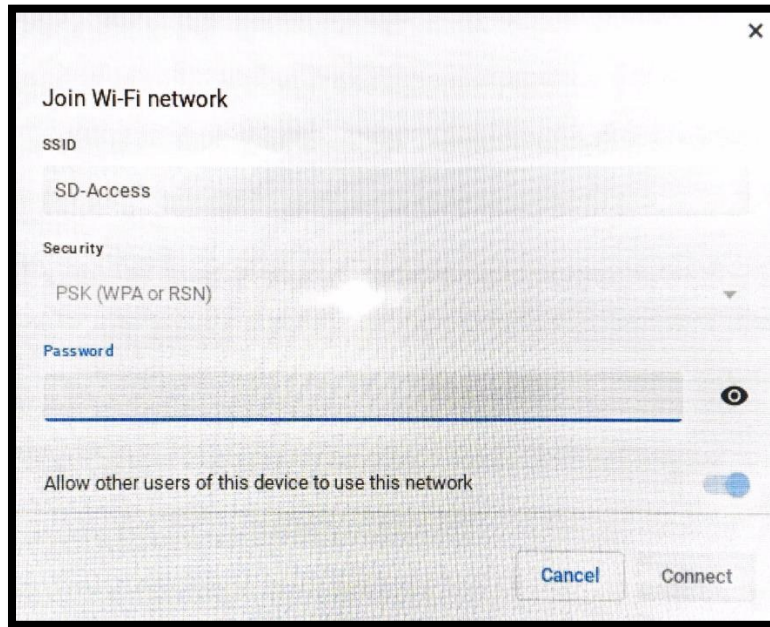


Where it says Optional Help Make Chrome OS better by automatically sending diagnostic and usage data to Google. Learn more


Slide it to off then Click Accept and continue

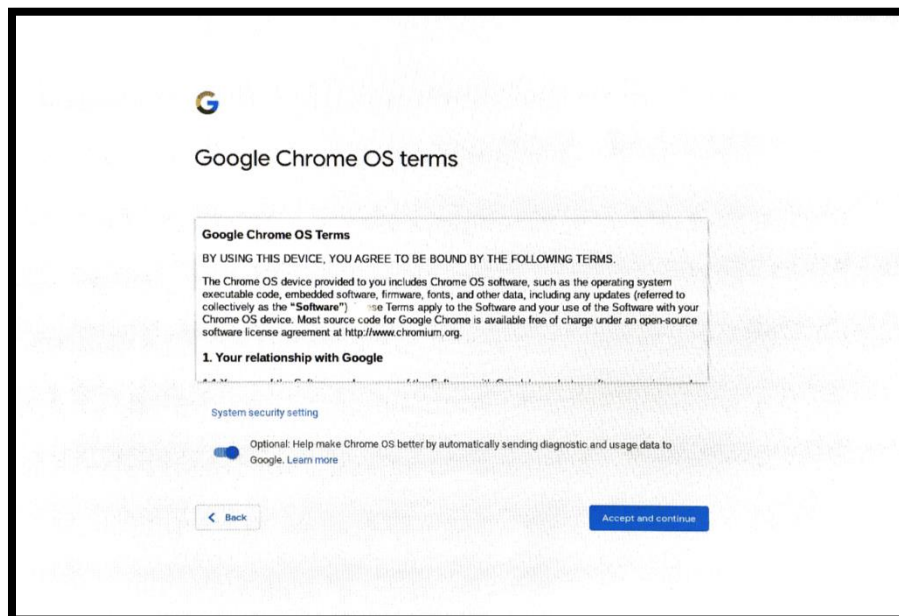

Checking for updates

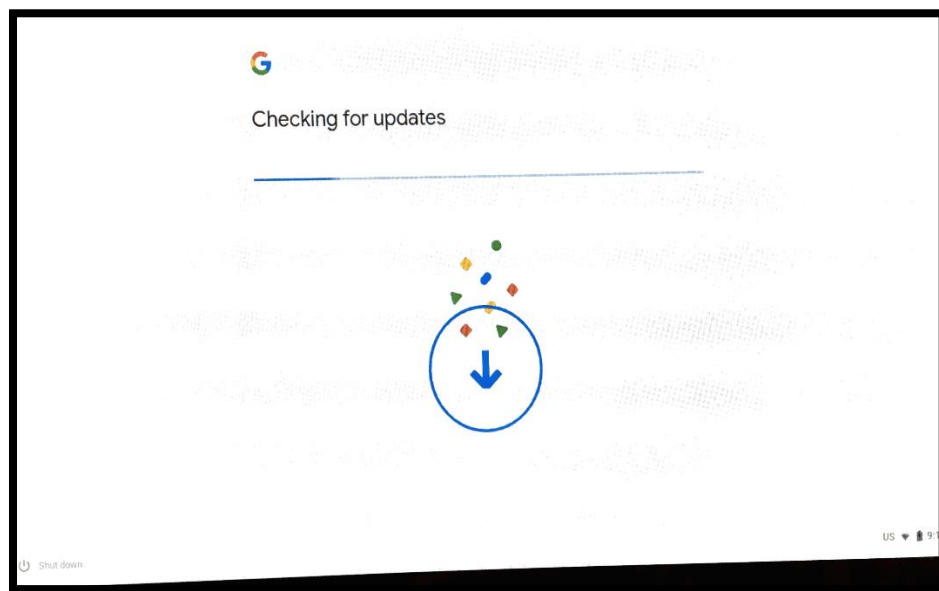


When you see enrolled successfully click done

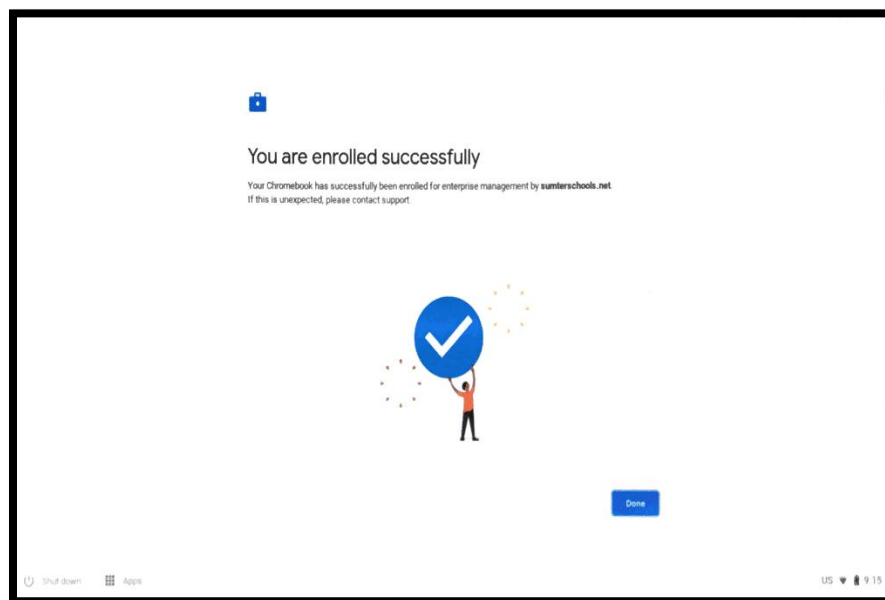

You will see the following screen and you can login.

Middle and High School Students will see the following screen:

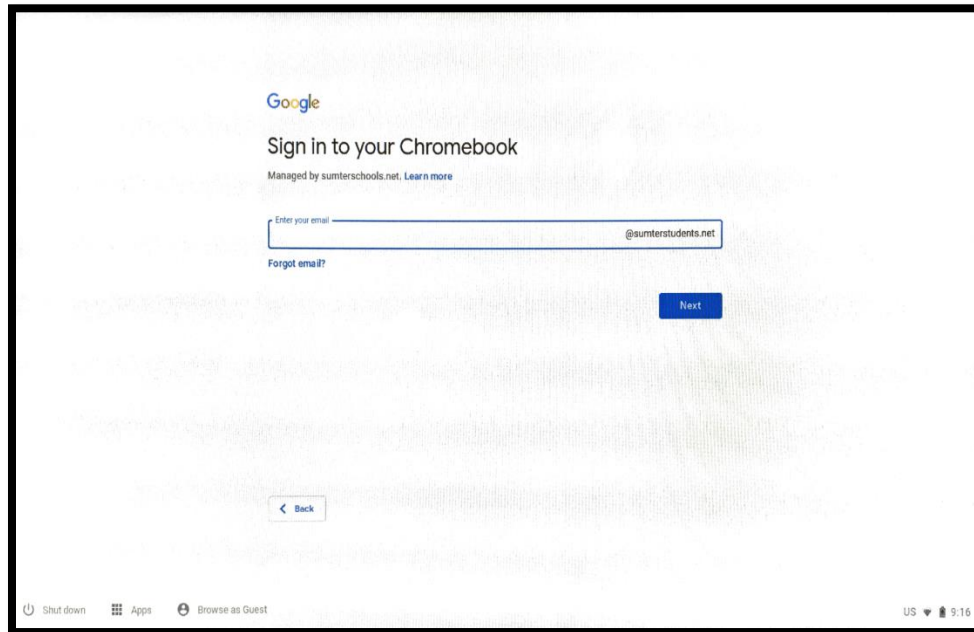

You will see the following screen for Elementary student.

